"Save Your Breath With



11388 Breininger Rd. P.O. Box 87 Hicksville, OH 43526 Website: www.modsafe.com

Phone: (800) 542-6646 (888) mod-safe (419) 542-6645 Fax: (419) 542-6475

Email: modsafe@bright.net

# **SERVICE INSTRUCTIONS**

**MODELS** 

BA200\_\_\_-S1

BA450\_\_\_-S1

BA600\_\_\_-S1

BA1000\_\_\_-S1

**BREATHING AIR PANEL** 

## SERVICE INSTRUCTIONS

(Refer to Figure No.1)

The filter cartridges used in the Breathing Air Panels have an average life expectancy of (6) six months, (depending on the quality of the air in your compressed air lines) under normal conditions. If liquid is being expelled out from the <u>Fourth Stage Automatic Float Drain</u>, MST, Inc. recommends changing all (3) three filter cartridges.

To replace all or individual filter cartridges in the Breathing Air Panels, follow these steps:

#### 1. FIRST STAGE ELEMENT REPLACEMENT

Element change is required when the Differential Pressure Gauge indicates a 6-10 PSID, 12 PSID max.

- A) First unscrew Bowl Assembly (1). A strap wrench may be required to break bowl, O-ring/manifold seal. Clean bowl ass'y in mild soap and water and blow dry with low pressure air.
- B) Remove Coalescing Element (2) by unscrewing End Cap Retaining Nut (3).
- C) Inspect the Filter Manifold (4) for dirt/contaminates and clean as required. Inspect O-ring (5) for cuts etc. and replace if required. Clean and apply light film of petroleum jell on O-ring before re-installing.
- D) Install new Coalescing Element and tighten End Cap Retaining Nut. Be sure Element is seated squarely on Manifold's boss and End Cap.
- E) Apply light film of petroleum jell on Bowl's beveled edge and threads to provide good seal. HAND TIGHTEN ONLY to Manifold.
- F) Dispose of used Coalescing Element according to local, state and federal regulations.

#### 2. PREFILTER SECOND/THIRD DUAL STAGE ELEMENT REPLACEMENT

Prefilter Dual Stage Element change is required when the Differential Pressure Gauge indicates an 8-10 PSID.

- A) Replace the Prefilter Dual Stage Element (6) using the above "First Stage Element" replacement instructions.
- B) Dispose of used Prefilter Dual Stage Element according to local, state and federal regulations.

## 3. FOURTH STAGE ADSORBER ELEMENT REPLACEMENT


The Adsorber Element change is required when the Differential Pressure Gauge indicates <u>ANY PRESSURE DROP</u>, or if any odor is detected by operator.

NOTE: If any liquids are being expelled out of the Fourth Stage Auto Drain, replace All 3 Elements.

- A) Replace the Adsorber Element (7) using the above "First Stage Element" replacement instructions.
- B) Dispose of used Adsorber Element according to local, state and federal regulations.

## 4. FINAL CHECK

- A) Pressurize system and check for leaks.
- B) Flush system with compressed air for five (5) minutes.
- C) Calibrate Carbon Monoxide Monitor as outlined in Neotronics Monitor Model OTOX Information Manual.

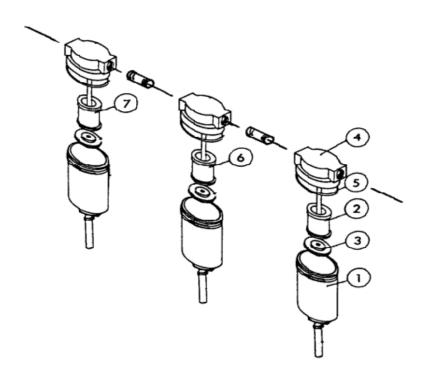

# REPLACEMENT FILTER ELEMENTS MODEL BA200\_\_\_-S1 BREATHING AIR PANEL

Replacement Filter Kit	
(Contains all elements shown below)	FB200
First Stage Element	80400
Second/Third Stage Element	80238-В
Fourth Stage Element	80401

# REPLACEMENT FILTER ELEMENTS MODEL BA450\_\_\_-S1 BREATHING AIR PANEL

Replacement Filter Kit	
(Contains all elements shown below)	FB450
First Stage Element	80403
Second/Third Stage Element	80404
Fourth Stage Element	

# REPLACEMENT FILTER ELEMENTS MODEL BA600\_\_\_-S1 BREATHING AIR PANEL

Replacement Filter Kit	
(Contains all elements shown below)	FB600
First Stage Element	80419
Second/Third Stage Element	
Fourth Stage Element	

# REPLACEMENT FILTER ELEMENTS MODEL BA1000\_\_\_-S1 BREATHING AIR PANEL

Replacement Filter Kit	
(Contains all elements shown below)	FB1000
First Stage Element	80461
Second/Third Stage Element	
Fourth Stage Element	