

*“Save
Your
Breath
With* **NST**®
MODERN SAFETY TECHNIQUES

11388 Breininger Road * P.O.Box 87 * Hicksville,OH 43526
Phone: (800)542-6646 * (888)“MOD-SAFE” * (419)542-6645
Fax: (419) 542-6475 * Email Address: modsafe@bright.net

**MODEL RP050BMST-S1
RESPIRATORY PROTECTOR®
MANUAL**

WARNING: Do not attempt to operate this equipment without first reading and understanding the manual enclosed with this device. Suitability for use of this device lies solely with user.

CONTENTS

SPECIFICATIONS	3
GENERAL SAFETY WARNINGS	4
GENERAL FILTER SYSTEM DESCRIPTION	5
GENERAL OPERATIONS	
INTRODUCTION	7
CUSTOMER AIR SUPPLY	7
MST RESPIRATORY PROTECTOR INITIAL INSTALLATION AND START-UP	8
MST RESPIRATORY PROTECTOR GENERAL OPERATION AND MAINTENANCE	11
FILTER SET SERVICE INSTRUCTIONS	13
RECORD KEEPING	15
PERFORMANCE CURVES	17
PART LIST	19
MATERIAL SAFETY DATA SHEETS	
CHARCOAL (THIRD STAGE)	24
CATALYST (FOURTH STAGE)	20

SPECIFICATIONS
RESPIRATORY PROTECTOR®
MODEL RP050BMST-S1

INLET PRESSURE (MAX.)	150 PSIG STATIC (10.4bar)
RATED AIR FLOW (MAX.)	50 SCFM (23.6 L/s)
OPERATING PRESSURE	100 PSIG DYNAMIC (6.9bar)
OUTLET PRESSURE RANGE	0-125 PSIG (0-8.6 bar)
OPERATING RELATIVE HUMIDITY (INLET AIR)	30-100% RH
OPERATING TEMPERATURE RANGE (INLET AIR)	68-150°F (20-65°C)
INLET CARBON MONOXIDE CONCENTRATION (MAX.)	40 PPM (VOLUME)*
OUTSIDE DIMENSIONS	24"L x 24"W x 5.75"D (610mm x 610mm x 146mm)
WEIGHT (INCLUDING MONITOR)	27 LBS. (12.3 kg.)
REPLACEMENT FILTER SET	FX050

*BASED ON MAXIMUM FLOW CONDITIONS (50 SCFM) FOR 40 HOURS MINIMUM CONTINUOUS PERFORMANCE.

GENERAL SAFETY WARNINGS

WARNING: The MST RESPIRATORY PROTECTOR MODELS:

- 1) **SHOULD NOT** be used when the air entering the filtering system is oxygen deficient. The MST Respiratory Protector® will not increase the oxygen content of the air.
- 2) **SHOULD NOT** be used in an Immediately Dangerous to Life and Health Atmosphere (IDLH) unless it is used in conjunction with a Back-Up Escape system or a supplied air Self-Contained Breathing Apparatus (SCBA), where applicable.
- 3) **CARBON MONOXIDE MONITOR** will alarm if Carbon Monoxide levels exceed requirements for Grade "D" Breathing Air set fourth by OSHA/CSA. If alarm should sound, remove respirator or activate SCBA and **immediately** move to safe breathable atmosphere. Have the proper qualified personnel examine the equipment and make the appropriate corrections before using again.
- 4) **SHOULD NOT** have air inlet pressure greater than 150 PSIG static (10.4bar). Personal injury could result.
- 5) **SHOULD NOT** have air outlet pressure that exceeds Manufacturers' Respirator/Hose Assembly pressure requirements. Personal injury could result.

The MST Respiratory Protector® is a Four Stage Purification System designed to remove or reduce select contaminates including **Carbon Monoxide** that is found in compressed air lines while monitoring for carbon monoxide through the MST Monitor. The Respiratory Protector can be connected directly to shop air from a standard compressed air source to help provide breathing quality air to face masks, helmets, hoods and other supplied air breathing apparatus.

GENERAL FILTER SYSTEM DESCRIPTION

(Refer to Figure No.1)

Air entering the MST Respiratory Protector® at the inlet (A) is usually contaminated with oil, water, dirt, rust, scale, gaseous Hydrocarbons and often deadly Carbon Monoxide. As the air passes through the First Stage (B) of the MST Prefilter, particulate matter is trapped and retained down to 0.3 microns. The air then enters the Second Stage (C) of the Prefilter which coalesces liquid contaminants down to 0.75 microns with an efficiency rating of 99.97% (meets Underwriters Laboratories Specification UL 586 for High Efficiency, Particulate, Air Filter Units). The liquid contaminants are trapped in the lower chamber of the prefilter and expelled out through the Automatic Float Drain (D). The Third Stage (E) contains a deep bed of odor absorbing activated charcoal which collects various gaseous Hydrocarbons (such as oil vapors, benzene, etc.). The Fourth Stage (F) contains a low temperature catalyst which converts Carbon Monoxide gas into Carbon Dioxide. The unique catalyst also converts or absorbs ozone, Nitric Oxide, Sulfur Dioxide, Nitrogen Dioxide, Hydrogen Sulfide, Ammonia, Acetaldehyde, Methyl Chloride, Methyl Ethyl Ketone, Acetone and Methyl Alcohol. The air then passes through a one (1) micron filter disc (G) before entering the Regulator (H), which is used to adjust the air pressure going to the respirator. A sample of the filtered air is taken at (I) and passed through the Carbon Monoxide Monitor (J). The Carbon Monoxide Monitor continuously checks the carbon monoxide levels per OSHA/CSA requirements and digitally displays the amount present in PPM, (parts per million). An audio and visual alarm will alert operators if levels of carbon monoxide exceed OSHA/CSA requirements.

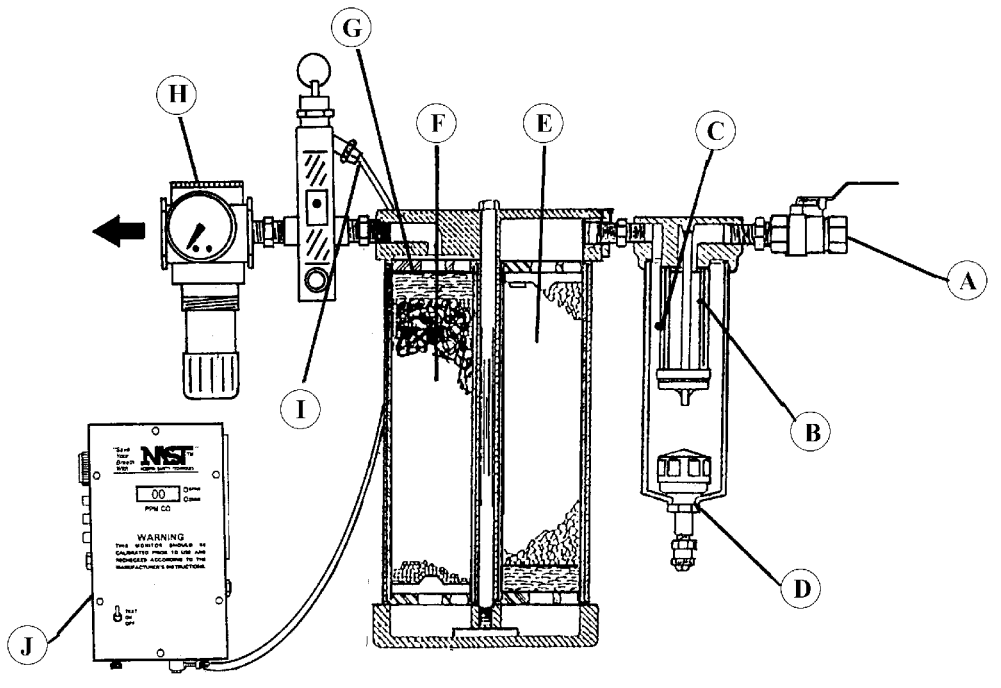


FIGURE NO. 1

MODEL RP050BMST-S1 RESPIRATORY PROTECTOR®

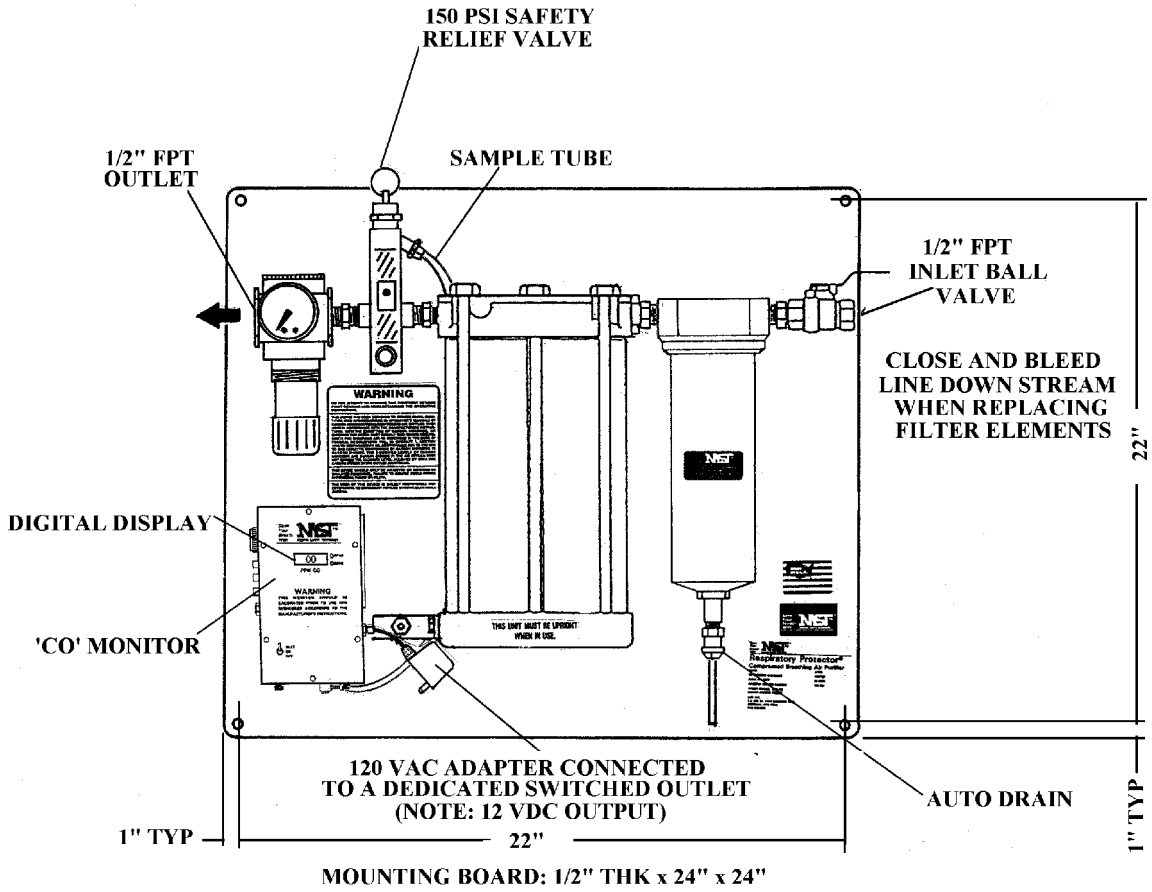


FIGURE NO. 2

GENERAL OPERATIONS

WARNING: The MST Respiratory Protector **should not:**

- 1) be used when the air entering MST's Unit is oxygen deficient. MST's Unit **will not** increase the oxygen content of the oxygen deficient air.
- 2) be used in an "Immediately Dangerous to Life and Health" atmosphere, (IDLH), unless it is used in conjunction with a back-up escape system or a supplied air self-contained breathing apparatus, (SCBA), where applicable.

MST, Inc. strongly recommends that a complete safety program be instated to ensure that the respiratory air is in compliance with all OSHA/CSA standards and other applicable laws regulating the use of supplied air respiratory systems. MST, Inc. recommends that the air quality be tested upon installation and periodically re-tested to ensure that the minimum requirements for breathing air are maintained.

MST, Inc. **will not** assume any liability for accidents or personal injury resulting from the improper use of this equipment. Service on this equipment should only be performed by qualified personnel. This system is to be used only by trained qualified personnel in accordance with a respiratory program as outlined in OSHA Regulation 29 CFR 1910.134(b).

CUSTOMER AIR SUPPLY

(Refer To Figure No. 3)

- 1) SUPPLIED AIR LINE - Use minimum 3/8" I.D. hose or pipe to MST Unit.
- 2) SUPPLIED AIR LINE PRESSURE - Maximum air pressure at MST Unit's inlet should **not** exceed 150 PSIG. As a Safety Back-Up, all MST Units incorporate a pressure relief valve rated at 150 PSIG.
- 3) SUPPLIED INLET AIR TEMPERATURE RANGE - 68 to 150°F (20-65°C).
- 4) SUPPLIED AIR CONDITIONING - May be required ahead of MST's Unit to control:
 - a) Inlet air temperature.
 - b) Large Volumes of oil/water from entering MST Unit. A coarse oil/water extractor, (rated at 2-microns abs.), may be required if excessive oil/water conditions are present. Installation of the extractor should be located as close to MST Unit's inlet hook-up as possible. MST, Inc. has coarse oil/water extractors available as an option.
- 5) AVOID INSTALLING MST UNIT AFTER DESICCANT DRYER - The Desiccant Dryer will produce extremely dry air, (4% R.H. or less), and MST's fourth stage catalyst requires 30-90% R.H. in the supplied air for the catalyst to work and remove Carbon Monoxide efficiently. The extremely dry air produced by a Desiccant Dryer will also cause worker discomfort, i.e. dry throat, etc.

MST RESPIRATORY PROTECTOR INITIAL INSTALLATION AND START-UP

(Refer To Figure No. 3 and 4)

- 1) CONNECT CUSTOMER'S PIPE/HOSE TO MST UNIT - Be sure a minimum 3/4" I.D. pipe or hose is used. Purge new air line prior to connecting to MST Unit.
- 2) NEW FILTER SYSTEM CONDITIONING - Flow supplied air through new filter sets for several minutes to condition.
- 3) POWER MONITOR/CALIBRATE - Supply a dedicated 120 VAC switched outlet for the 120 VAC Adapter that comes with unit (adapter will convert the 120 VAC to a 9 VDC output). See MST MONITOR MANUAL, Accessories section, for further details. Plug the 120 VAC Adapter cord into the right side of monitor at jack located below the monitor's battery compartments. Two 9-volt batteries are supplied with unit and can be installed in monitor to provide a back-up power source if the main 120 VAC power source fails or is shut-off by mistake. The batteries will power monitor continually for 30 - 35 hours. After connecting monitor to power source, turn on and leave warm-up for (5) minutes. Now check monitor's circuits/audible-visual alarm system by pressing "OFF/ON TEST" switch up and hold. If monitor OK, the following will occur:
 - 1) Red/Amber LED - will come on steady
 - 2) Green LED - will blink, then come on steady
 - 3) Audible alarm will sound and the remote alarm jack will be energized.Monitor's calibration should be checked now. Refer to MST MONITOR MANUAL.
- 4) CALIBRATION GAS REQUIREMENTS - Zero Gas: Nitrogen, free of 'CO'. Span Gas: 50 to 150 ppm of 'CO' concentration in air. Calibration gas flow to monitor should be 0.5 to 1.5 SCFH (approx. 472 cc/min).
- 5) REGULATOR/SAMPLE AIR FLOW METER - Needs to be set so proper air sample flow will be metered to the monitor. The regulator needs to be adjusted for proper air flow to breathing air system and then the air flow meter ball set between 0.5 - 1.5 SCFH or in the green boxed area, (depending on style of scale meter has).
- 6) EXTREME TEMPERATURE CHANGES - Avoid; MST's monitor best performs at a temperature range of 0 - 105°F (-17 to 40°C). Always calibrate monitor after it has stabilized in the surrounding air temperature where system is to be used.
- 7) RESPIRATOR/HOOD/HOSE ASSEMBLY HOOK-UP - Consult Manufacturer's respirator manual for the proper air pressure requirements and set regulator(s) at point of attachment (MST Unit outlet or remote regulated drops). The air should be dynamically flowing through respirator/hose assemblies when the air pressure is set. DO NOT EXCEED RESPIRATOR/HOSE ASSEMBLY MANUFACTURER'S PRESSURE REQUIREMENTS OR PERSONAL INJURY COULD RESULT.

MODEL RP050BMST-S1 RESPIRATORY PROTECTOR®

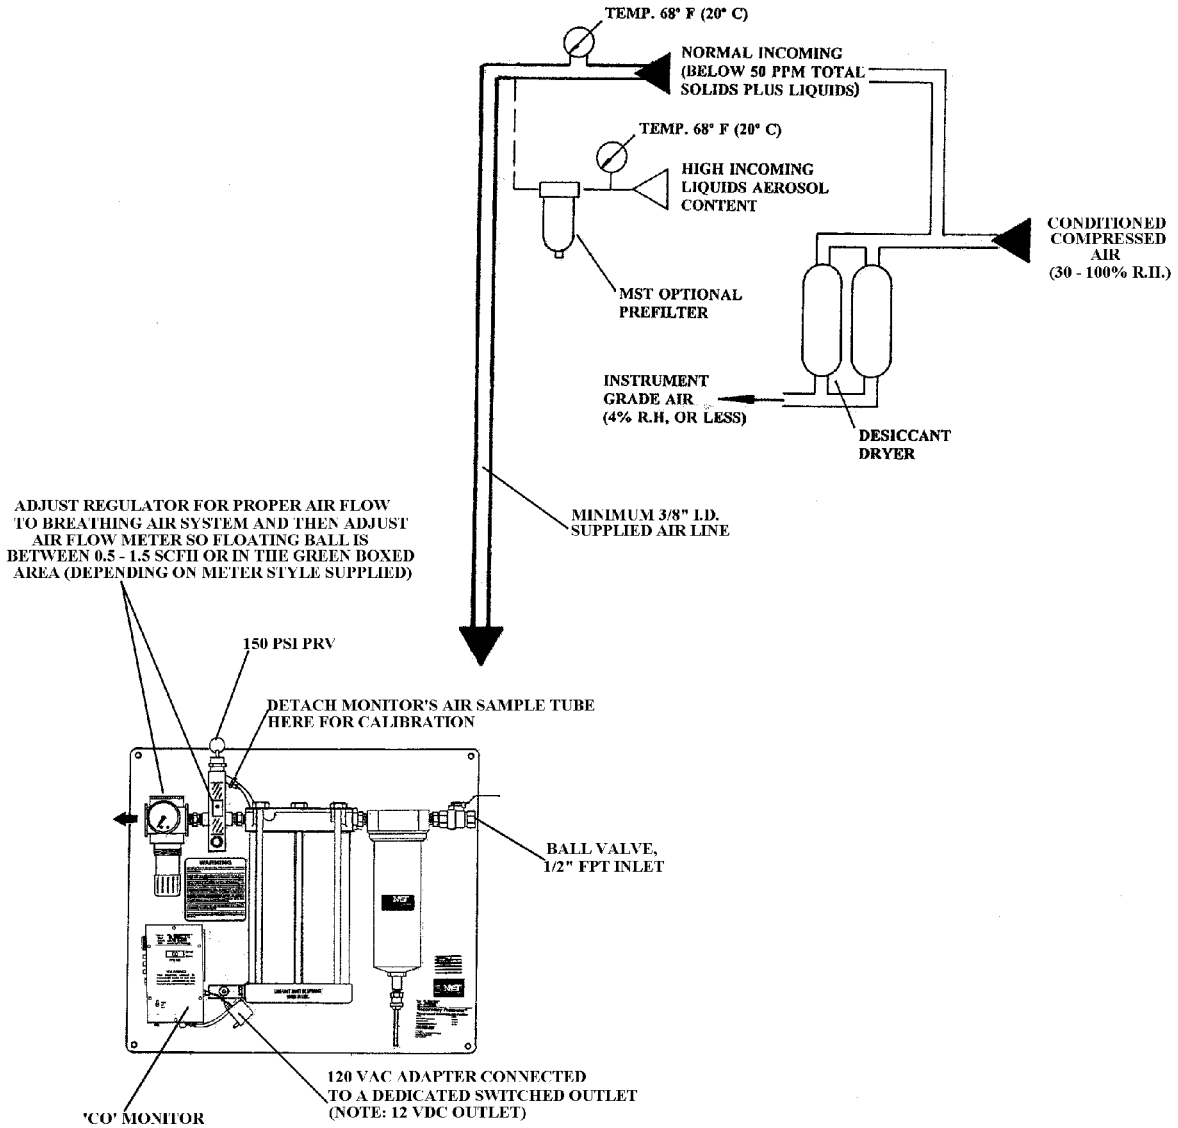


FIGURE NO. 3

RESPIRATORY PROTECTOR®
MODEL RP050BMST-S1

AIR SAMPLE TO
MONITOR ADJUSTMENT

WARNING : SERIOUS INJURY could result if the AIR SAMPLE METERING VALVE is not properly adjusted. Proper sample air flow to 'CO' monitor is required for monitor to give correct 'CO' level readout.

AIR SAMPLE METERING VALVE ADJUSTMENT

- A) Pressurize system and set regulator for proper air flow to respirator(s).
- B) Adjust Air Sample Metering Valve's adjustment knob so the black floating ball is within the GREEN BOXED area etched on valve body. Proper air sample is now being metered to the 'CO' Monitor. Periodically check to be sure ball is floating in this area.

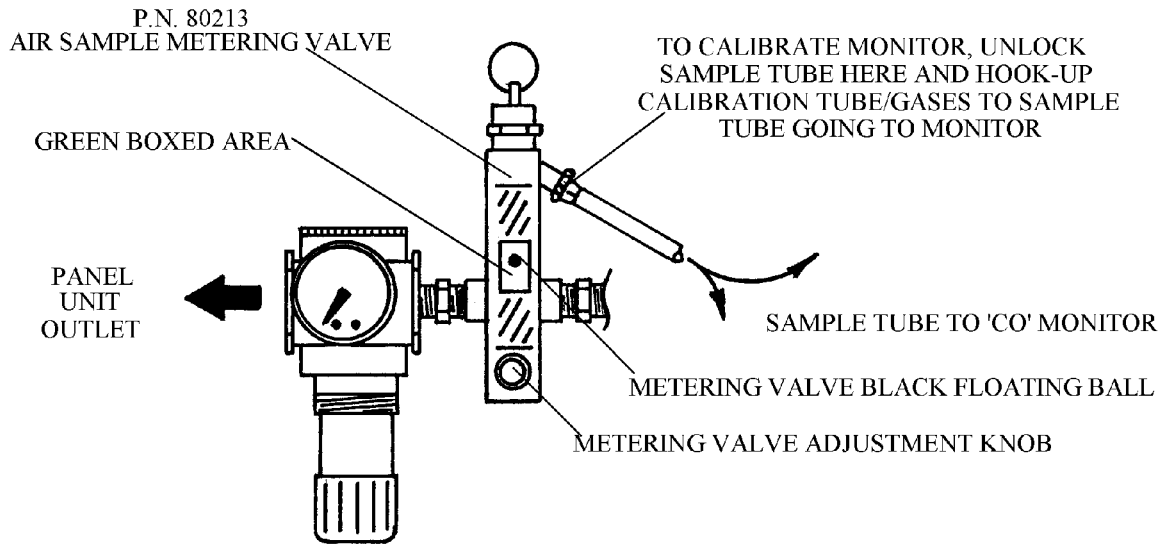


FIGURE NO. 4

MST RESPIRATORY PROTECTOR®
GENERAL OPERATION AND MAINTENANCE

- 1) MST MONITOR - Utilizes an electrochemical sensor to measure the carbon monoxide content of the respirable air. If a problem has developed in the system, the monitor will alarm due to one or more of the following conditions:
 - a) Monitor is out of calibration. The monitor should be calibrated monthly if used continuously and prior to use if used on a non-continuous basis. Calibrate monitor as outlined in the MST MONITOR MANUAL.
 - b) If the monitor can be and is calibrated, but the alarm still sounds, the filter cartridge life is exhausted. Replace all three (3) filter cartridges as outlined in the FILTER REPLACEMENT INSTRUCTIONS, page 13.
 - c) If the monitor can not be calibrated, the carbon monoxide sensor may require replacement. See MST MONITOR MANUAL for replacement instructions and other troubleshooting information. The MST MONITOR has one (1) year warranty. All warranty work must be performed at factory.
 - d) If the monitor was calibrated in a surrounding temperature other than where the system was being used and the temperature difference was 36°F (20°C) or greater, the monitor may give a false alarm due to its characteristics. Always calibrate the monitor in the temperature conditions where the monitor is to be used in. Monitor best performs at temperature range of 0 to 105°F (-17 to 40°C).
 - e) 'RF' signals causing interference to monitor through Remote Alarm Options and/or Optional Power Adapter cords. Contact factory if this is occurring.
- 2) MST MONITOR - Alarms should be checked prior to use.
- 3) MST MONITOR - Power supply is (2) 9-volt transistor - type batteries, (unless optional power supply used). The batteries will power the monitor continuously for approximately (30-35) hours. When the batteries output fall below (7.3) volts, the Amber LED "Low Battery" light will come on, indicating the batteries require replacement. When installing the new batteries into the battery holders, review polarity position marked inside holders and install batteries accordingly.
- 4) MST MONITOR - Flow of the air sample to monitor should be checked periodically to ensure sample air flow meter is not clogged. This situation normally occurs when customers' supplied air has excessive liquids in it and the filters in the MST unit are not routinely changed. Periodically check the regulator/air flow meter for proper setting/location of air flow meter floating ball and general appearance (presence of excessive oil, water).
- 5) MST RESPIRATORY PROTECTOR® SYSTEM - Filters should be replaced monthly unless the air quality conditions warrant more or less frequent replacement. Replace all (5) filter cartridges if:
 - a) The "CO" monitor alarms (fourth stage catalyst is used up).
 - b) The operator detects a petroleum smell and or taste in his purified air (third stage charcoal is used up).

NOTE: If the supplied air entering MST's unit has high volumes of liquids in it, the filter set life may be greatly reduced. See CUSTOMER AIR SUPPLY, page 7, for corrective measures to take.

6) MST RESPIRATORY PROTECTOR® SYSTEM - New filter set:

- a) Has an indefinite shelf life, but should be stored in a cool/dry storage area.
- b) When first installed in MST's unit the filters should be conditioned by flowing the customer's supplied air through system for several minutes.

NOTE: If MST's unit is not to be used for an extended period of time, before storing, check 3rd and 4th stage filters for presence of liquid/moisture. If moisture present, dry system and replace all filters. Also, if moisture present, consider changing filter set more frequent and or installing MST's OPTIONAL PREFILTER prior to MST's system hook-up.

FILTER SET **SERVICE INSTRUCTIONS**

(Refer To Figure No. 5)

**WARNING: Always turn off air supply and bleed air pressure before disassembling unit or
SERIOUS INJURY COULD RESULT.**

MST, Inc. recommends replacing all three (3) filter cartridges after one (1) month of use unless conditions warrant more or less frequent replacement. To replace the filter cartridges in the RESPIRATORY PROTECTOR® follow these steps:

1) PREFILTER FIRST/SECOND DUAL STAGE ELEMENT REPLACEMENT

- a) First unlock tube locking collar and then pull Drain Tube 1 down through case. Then unscrew Prefilter Bowl Assembly 2 , clean in mild soap and water and blow dry with low pressure air.
- b) Remove Dual Stage Element 3 by unscrewing End Cap Retaining Nut 4 .
- c) Inspect the Prefilter Manifold 5 for dirt/contaminates and clean as required. Inspect O-Ring 6 for cuts, etc. and replace if required.
- d) Install new Dual Stage Element and Tighten End Cap Retaining Nut. Be sure Element is seated squarely on Manifold boss and End Cap.
- e) Apply light film of petroleum jelly on Bowl's beveled edge to provide good seal between Bowl and O-Ring. HAND TIGHTEN ONLY.
- f) Guide Drain Tube back through hole in case bottom and lock into tube locking collar.
- g) Dispose of used Dual Stage Element according to local, state and federal regulations.

2) THIRD/FOURTH STAGE CARTRIDGE REPLACEMENT

- a) Loosen Bracket Bolt 7 from Bracket 8, (do not remove).
- b) Loosen the five Manifold Bolts 9 and remove the front two Bolts. Now slide out the Third 10 and Fourth 11 Stage Aluminum Tube Assemblies.
- c) Remove the End Cap 12 from Third Stage Aluminum Tube Assembly and slide old Third Stage Filter Cartridge 13 out of aluminum tube. Clean aluminum tube in mild soap and water, dry and install new Third Stage Filter Cartridge. Be sure the Flow Direction Arrow on Third Stage Filter Cartridge is pointing down. Remove End Sealing Label 14 and install new End Cap.
- d) Follow same procedure for the Fourth Stage Filter Cartridge 15 replacement as in step (C). Be sure the Flow Direction Arrow on Fourth Stage Filter Cartridge is pointing up. Also be sure to remove End Sealing Label before installing new End Cap.
- e) Now slide the Third and Fourth Stage Aluminum Tube Assemblies back in place and install the front two Manifold Bolts.
- f) Tighten Manifold Bolts in sequence from center outward to 100 inch-pounds (1.15 Kg-M). Repeat sequence and re-torque bolts to 250 inch-pounds (2.88 Kg-M).
- g) Tighten Bracket Bolt 7 against Bracket 8 .
- h) Dispose of used cartridges according to local, state and federal regulations.

3) FINAL CHECK AND CALIBRATION

- a) Pressurize system and check for leaks.
- b) Flush system with compressed air for several minutes.
- c) Calibrate Carbon Monoxide Monitor as outlined in MST MONITOR MANUAL.

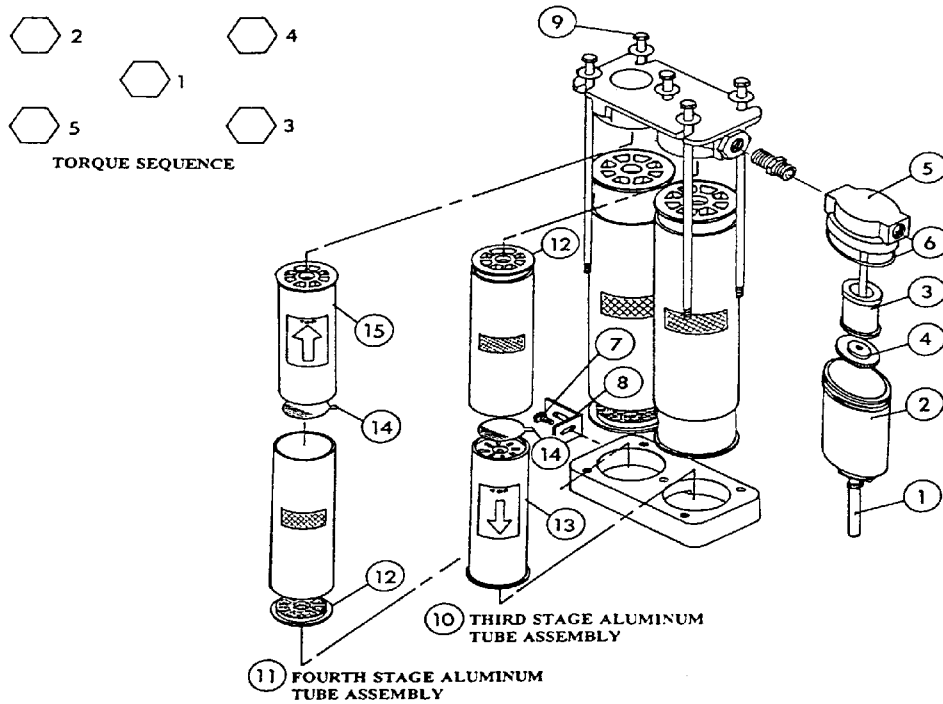


FIGURE NO. 5

RECORD KEEPING


Record all periodical air quality checks, monitor calibration date, filter cartridge change intervals and any other service performed on the MST RESPIRATORY PROTECTOR®.

MST INC. SHALL NOT BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, (DIRECT OR CONSEQUENTIAL), ARISING OUT OF THE USE OF OR THE INABILITY TO USE THIS PRODUCT, BEYOND THE REPLACEMENT OF DEFECTIVE MATERIALS OR WORKMANSHIP. USER OF SUPPLIED AIR RESPIRATORS SHOULD EVALUATE THEIR OWN PARTICULAR APPLICATION AND PERFORM THEIR OWN TESTS FOR AIR QUALITY TO DETERMINE THE SUITABILITY FOR USE OF THIS PRODUCT.


For further information, or questions about service or maintenance care of this unit, contact your local distributor or MST @ (800) 542-6646.

MST, INC.
SERVICE RECORD
RESPIRATORY PROTECTOR®
MODEL RP050BMST-S1

DATE OF SERVICE	SERVICE PERFORMED

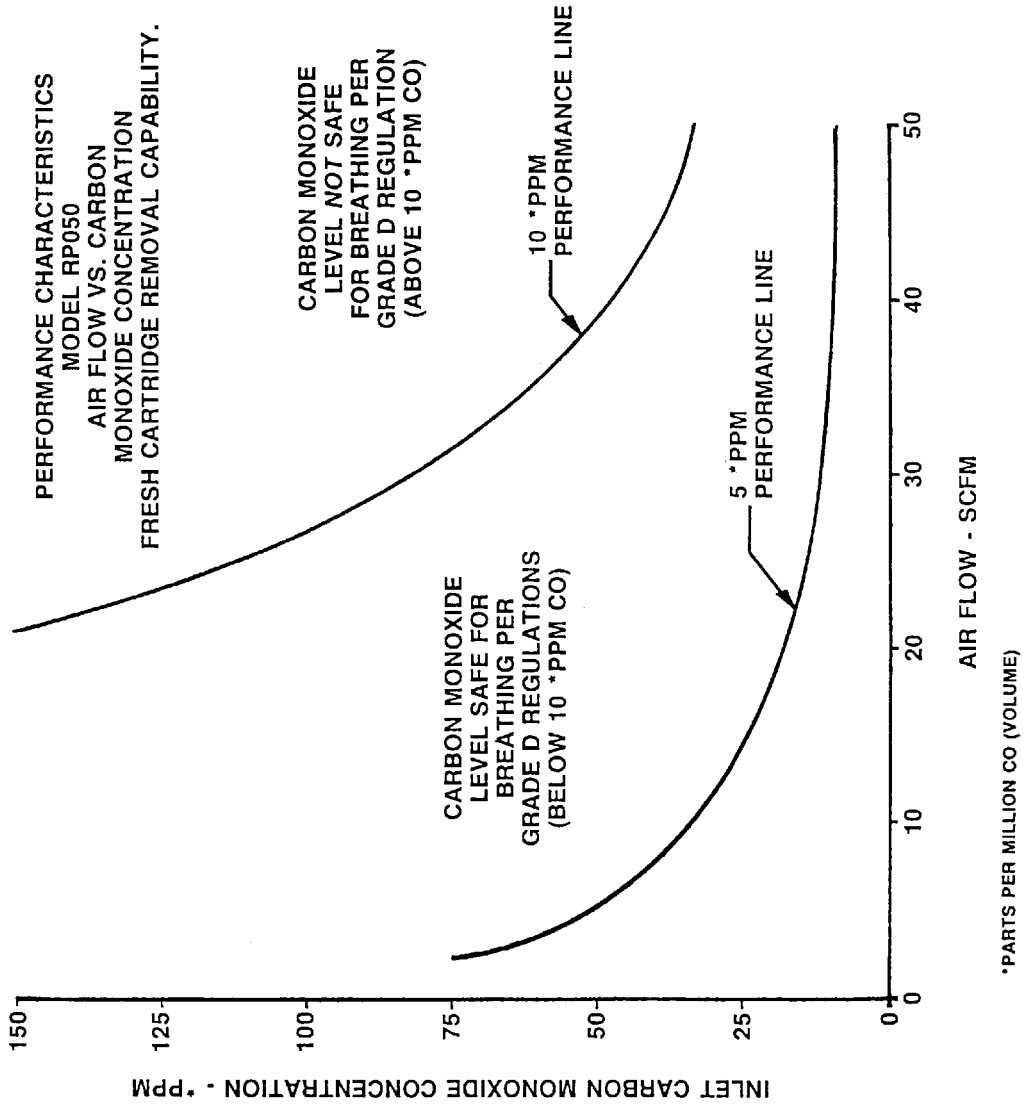


PERFORMANCE CHARACTERISTICS
MODEL RP050
AIR FLOW VS. PRESSURE DROP

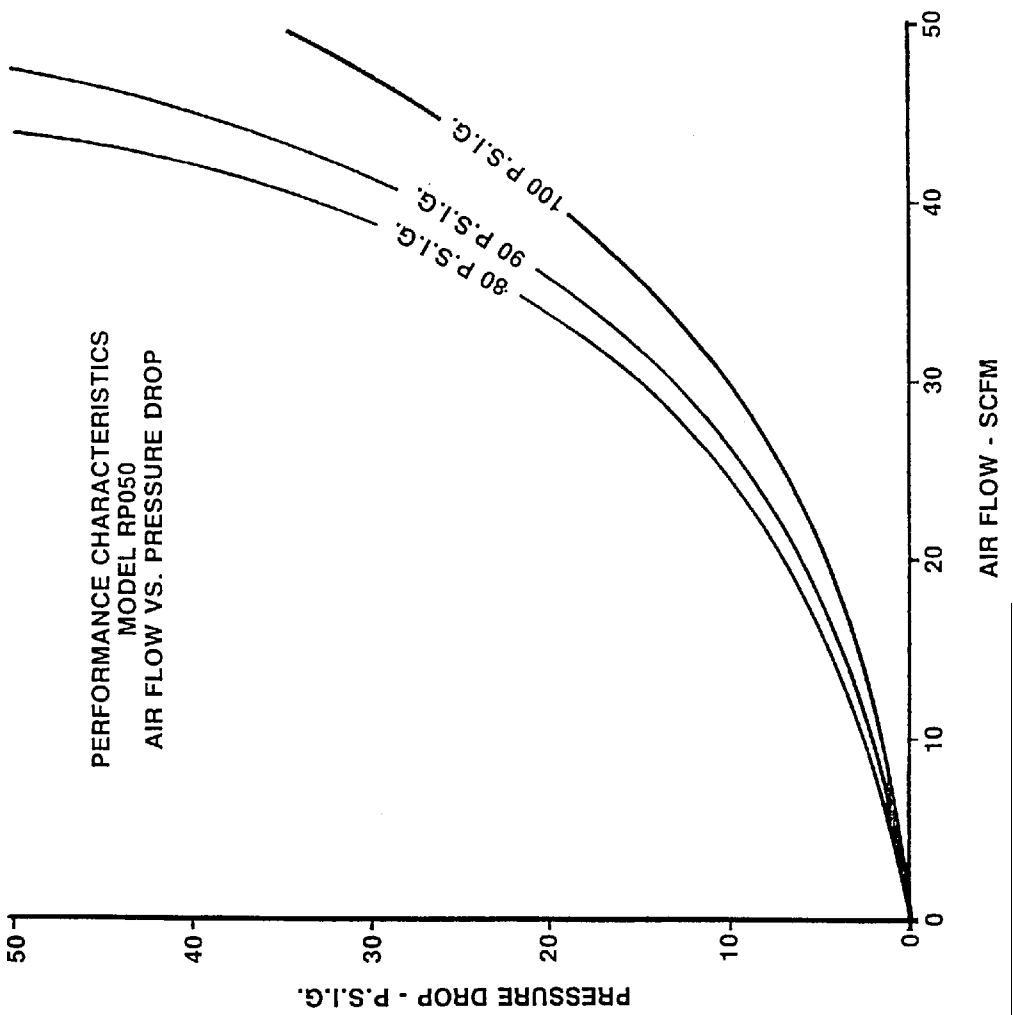

MODEL RP050BMST-S1 RESPIRATORY PROTECTOR

- | | | | |
|----|--|----|--|
| 1 | 80106, (1), 1/2" BALL VALVE | 14 | 12021, (5), MANIFOLD WASHERS |
| 2 | S608-006, (2), HEX NIPPLE -1/2" x 3/8" | 15 | S608-005, (2), HEX NIPPLE - 3/8" |
| 3 | 8009001, (1), PREFILTER-50 SCFM | 16 | 80098, (1), CROSS - 3/8" |
| 4 | 80051, (1), TUBE LOCKING COLLAR | 17 | S638-007, (2), 3/8" X 1/4" RD. BUSHING |
| 5 | S710-005, (1), DRAIN TUBE | 18 | 80014, (1),PR VALVE, 150 PSI |
| 6 | 80001, (1), BLUE BASE | 19 | S623-003, (1), 3/8" x 90° ST. ELBOW |
| 7 | 80005, (1), A1 TUBE THIRD STAGE | 20 | S608-002, (1), 1/8" x 1/4" HEX NIPPLE |
| 8 | 80005, (1), AL TUBE FOURTH STAGE | 21 | 80213, (1), SAMPLING VALVE |
| 9 | 80114, (1) BASE BRACKET | 22 | 80261, (1), TUBE LOCK COLLAR x 90° |
| 10 | 80078, (1), BLUE MANIFOLD | 23 | 80076, (1), PRESSURE GAUGE, 0-160 |
| 11 | 80009, (1), MANIFOLD BRACKET | 24 | 80075, (1), REGULATOR |
| 12 | S006-148, (3), BRACKET BOLTS | 25 | 80339, (1), MONITOR BRACKET |
| 13 | S011-040, (5), MANIFOLD BOLTS | 26 | 8012701, (1), MST "CO" MONITOR |

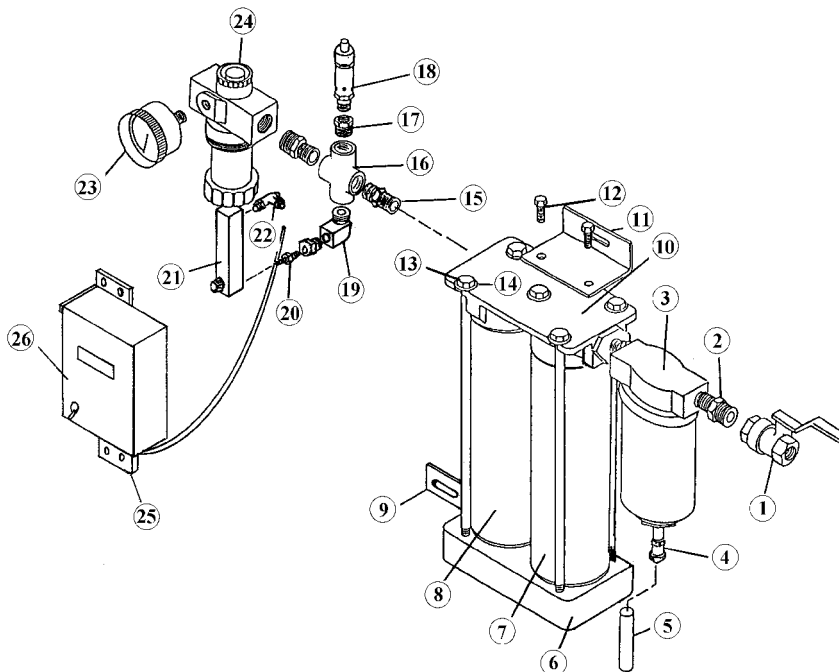

RECEIVED AUG 08 1995

MATERIAL SAFETY DATA SHEET

Page 1 of 6

Revision Date: 2/17/95

Revision No.: 2

1. CHEMICAL PRODUCT AND COMPANY IDENTIFICATION

Product Name: Nuchar WV-B Activated Carbon
Chemical Name: Activated Carbon
Chemical Family: Carbon
Formula: C
CAS Registry Number: 7440-44-0

Manufacturer: **WESTVACO CORPORATION**
Carbon Department
Washington Street
Covington, VA 24426

Telephone Numbers:
Transportation Emergencies:
CHEMTREC (U.S.A.): (800) 424-9300 (24 hours)
CHEMTREC (International): (202) 483-7616 (24 hours, call collect)
Product Information: (703) 962-1121 (EST, 8:00 a.m.-5:00 p.m., M-F)

2. COMPOSITION / INFORMATION ON INGREDIENTS

<u>Components</u>	<u>CAS #</u>	<u>% by Wt.</u>	<u>Hazardous*</u>
Carbon	7440-44-0	> 95	Yes
Phosphoric Acid	7664-38-2	≤ 5	Yes

* By OSHA definition, 29 CFR 1910.1200 (See Section 3 for Hazards Identification, Section 8 for Exposure Guideline, and Section 16 for other information).

3. HAZARDS IDENTIFICATION

EMERGENCY OVERVIEW

This product is an odorless black granular material. Never enter a confined space containing activated carbon since it will adsorb oxygen and asphyxiation may result. Prolonged or repeated exposure to dust may cause eye and respiratory tract irritation.

NUCHAR WV-B ACTIVATED CARBON

Page 2 of 6

Revision Date: 2/17/95
Revision No.: 2**3. HAZARDS IDENTIFICATION (Continued)****Potential Health Effects:**

- | | |
|--|--|
| Routes of Entry: | · Inhalation, ingestion, eye and skin contact |
| Medical Conditions Aggravated by Exposure: | · None documented |
| Eyes: | · Irritant. Not corrosive |
| Skin: | · Is not a primary skin irritant, skin sensitizing, or corrosive agent |
| Ingestion: | · LD ₅₀ (rats) indicates that it is not toxic. |
| Inhalation: | · Possible irritation of upper respiratory tract |
| Target Organ Effects: | · Eye irritant |
| Chronic Effects (Cancer Information): | · NTP: Not listed |
| | · IARC: Not listed |
| | · OSHA: Not regulated |

4. FIRST AID MEASURES

- | | |
|-------------|--|
| Eyes: | · Promptly flush eyes with running water for 15 minutes, including water under eyelids. Consult a physician if irritation develops. |
| Skin: | · Wash affected area well with soap and water. Get medical help if irritation develops. |
| Ingestion: | · Give 2-3 glasses of milk or water to dilute. Contact physician or poison control center promptly for instructions. If vomiting occurs, give more fluids. |
| Inhalation: | · Remove to fresh air. Get medical help if irritation develops. |

5. FIRE FIGHTING MEASURES

- | | |
|---|---|
| Flammable Properties: | |
| Hazardous Combustion Products: | · Material will burn in a fire, releasing combustion products of carbon monoxide, carbon dioxide, water, and phosphorus pentoxide. |
| General Hazards: | · Other materials adsorbed onto the carbon may also be released. |
| Extinguishing Media: | · Water fog, fire fighting foam, dry chemical, or carbon dioxide |
| Fire Fighting Instructions: | · Remove all carbon from the building. Fire fighters should wear full protective gear and use self-contained breathing apparatus with a full facepiece. (MSHA/NIOSH approved or equivalent) |
| Other Information: | |
| Flashpoint: | · Not applicable |
| ASTM Ignition Temperature, D4366: | · 420-450°C |
| Flammability Limits in Air (% by volume): | · LFL: Not applicable |
| | · UFL: Not applicable |

NUCHAR WV-B ACTIVATED CARBON

6. ACCIDENTAL RELEASE (SPILL MEASURES)

- Notify safety personnel for large spills. Avoid generation of airborne dust. Scoop up solid for recovery or disposal. Those involved in clean-up need protection against skin and eye contact and inhalation of dust or mist.

7. HANDLING AND STORAGE

- Handling:
- Follow good handling and housekeeping procedures, avoiding spills, accumulation of dust, and generation of airborne dust.
 - Avoid prolonged contact with skin and eyes.
 - Avoid inhalation of dust.
 - Wear rubber gloves and safety glasses or goggles.
 - Use with adequate ventilation.
 - Wash thoroughly after handling.
- Storage:
- Store in a sealed container in a clean, dry, well-ventilated area away from strong oxidizers, ignition sources, combustible materials, and heat.

8. EXPOSURE CONTROLS / PERSONAL PROTECTION

- Engineering Controls:
- Use general and local exhaust ventilation for nuisance dust and to prevent irritating concentrations of dust or mist in the workplace. Ventilation requirements will depend on the process and should be adequate to avoid exceeding the recommended TLV's.
- Eye Protection:
- Wear safety glasses with side shields, safety goggles, or a face shield, especially in dusty conditions. Provide an eye wash station nearby.
- Skin Protection:
- Wear work or disposable gloves and long sleeve shirts to prevent long term exposure.
- Respiratory Protection:
- Wear a NIOSH approved dust mask to limit exposure. An approved self-contained breathing apparatus with full facepiece is recommended for nonroutine or emergency conditions for inhalation protection.
- Other Protective Equipment:
- Wear clothing to limit skin contact, i.e., aprons, coveralls, long sleeve shirts, etc.
- Exposure Guidelines
- OSHA and ACGIH suggest that exposure to any dust or mist be kept below the level of a nuisance particulate. For particulates not otherwise regulated, the OSHA PEL for the respirable fraction is 5 mg/m³ and for total dust the OSHA PEL is 15 mg/m³. The ACGIH threshold limit value for particulates not otherwise classified (PNOC) is 10 mg/m³ for an 8-hour TWA. OSHA PEL and ACGIH TLV for phosphoric acid is 1 mg/m³ for an 8-hour TWA and 3 mg/m³ for a 15-minute STEL.
-

NUCHAR WV-B ACTIVATED CARBON

Page 4 of 6

Revision Date: 2/17/95Revision No.: 2**9. PHYSICAL AND CHEMICAL PROPERTIES (TYPICAL)**

Boiling Point, °C:	4000	Apparent Density, lbs/ft ³ :	14 - 19
Melting Point, °C:	3500	Solubility in Water:	Insoluble
Freezing Point, °C:	Not applicable	Water Solubles, % max:	4.0
Vapor Pressure, mm Hg:	Not applicable	Physical State:	Solid
Surface Area (Nitrogen BET Method), m ² /g:	1400 - 1600	Appearance:	Black granules
Total Pore Volume, cm ³ /g:	2.2 - 2.5	Odor:	Odorless

10. STABILITY AND REACTIVITY

Chemical Stability:	• Stable
Conditions to Avoid:	• Heat and ignition sources, strong oxidizers, and combustible materials
Hazardous Decomposition Products:	• CO, CO ₂ , P ₂ O ₅
Hazardous Polymerization:	• None

11. TOXICOLOGICAL INFORMATION

Eyes:	• Irritant
Skin:	• Not a primary skin irritant, sensitizing, or corrosive agent
Inhalation:	• Not established
Ingestion:	• Oral LD ₅₀ > 5g/kg (rats)
Subchronic Effects:	• Not established
Teratology (Birth Defects):	• Not established
Mutagenicity (Genetic Effects):	• Not established

12. ECOLOGICAL INFORMATION

Ecotoxicological Information:	
• LC ₅₀ (minnows):	Not established
• Effect of low concentrations on aquatic life is unknown.	
Chemical Fate Information:	Not established

NUCHAR WV-B ACTIVATED CARBON

Page 5 of 6

Revision Date: 2/17/95Revision No.: 2**13. DISPOSAL CONSIDERATIONS**

Activated Carbon is not classified as a hazardous waste. Follow federal, state, and local regulations for industrial waste disposal. Incineration or landfilling in permitted facilities is recommended.

14. TRANSPORT INFORMATION

<p>DOT Description: Proper Shipping Name: Hazard Class:</p>	<ul style="list-style-type: none"> • Carbon, activated • Nuchar Activated Carbon was tested according to the IMDG Code "Self-Heating Test for Carbon" and is not considered spontaneously combustible. Therefore, Nuchar Activated Carbon is not subject to the provisions contained in the IMDG Code for "Carbon, activated."
<p>UN/NA Number:</p>	<ul style="list-style-type: none"> • Not applicable

15. REGULATORY INFORMATION

<p>U.S. Federal Regulations: OSHA (29 CFR 1910.1200): CERCLA (40 CFR 302.4):</p> <p>RCRA (40 CFR 261.33, 261.20-24):</p> <p>SARA Section 312 (40 CFR 355) Hazard Category:</p> <p>SARA Section 313:</p> <p>Toxic Substance Control Act:</p> <p>State Right to Know Acts (MA, NJ, PA):</p> <p>California Proposition 65:</p>	<ul style="list-style-type: none"> • Air contaminate, Table Z-1-A • Phosphoric acid is listed as a CERCLA hazardous substance, RQ=5000 lbs • Listed Hazardous Waste: No • Exhibits characteristics of hazardous waste: No
<p>International Regulations: Canada (DSL): Canada (NPRI):</p> <p>Canada (WHMIS): Europe (EINECS): Japan (MITI): Australia (AICS):</p>	<ul style="list-style-type: none"> • Physical Hazards: None known • Health Hazards: Eye irritant • This product contains phosphoric acid which is subject to the reporting requirements of SARA Title III, Section 313. • Listed in the TSCA inventory of chemicals, 7440-44-0.
<p>FCC:</p>	<ul style="list-style-type: none"> • Component subject to reporting is: Phosphoric acid ≤ 10% • The required chemical analyses and risks assessments were performed on this product. Results indicate that there are no significant risks (or observable effects) as defined by this statute, associated with this product under conditions of normal use. • Listed in inventory: 7440-44-0 • This product contains phosphoric acid which is subject to the reporting requirements of NPRI. • Activated carbon is regulated under WHMIS • Listed in inventory: 2311533 • Not applicable • Listed in inventory: 7440-44-0
<p>FCC:</p>	<ul style="list-style-type: none"> • Nuchar activated carbon meets all specifications set forth in the 1981 edition and later supplements of the Food Chemicals Codex.

RECEIVED AUG 08 1995

NUCHAR WV-B ACTIVATED CARBON

Page 6 of 6

Revision Date: 2/17/95

Revision No.: 2

16. OTHER INFORMATION

Hazard Rating:

HMIS:

- Health - 1
- Flammability - 1
- Reactivity - 0
- Protective Equipment - To be set by user

Revision Summary:

- Add FCC statement and correct composition

Supersedes:

- 5/18/94
-

ABBREVIATIONS

1.	ACGIH	American Conference of Governmental Industrial Hygienists
2.	BOD _x	Biochemical Oxygen Demand (After x Days)
3.	CERCLA	Comprehensive Environmental Response, Compensation, and Liability Act of 1980 (CERCLA)
4.	CFR	Code of Federal Regulations
5.	COD	Chemical Oxygen Demand
6.	cps	Centipoise
7.	DOT	Department of Transportation
8.	EPA	Environmental Protection Agency
9.	HMIS	Hazardous Material Information System
10.	IARC	International Agency for Research on Cancer
11.	LC ₅₀	A single calculated concentration in air or water resulting in 50% mortality of a group of test animals.
12.	LD ₅₀	A single calculated dose of a material expected to kill 50% of a group of test animals.
13.	LEL	Lower Explosive Limit in air
14.	MSHA	Mine Safety and Health Administration
15.	NIOSH	National Institute for Occupational Safety and Health
16.	NTP	National Toxicology Programs
17.	OSHA	Occupational Safety and Health Administration
18.	PEL	Permissible Exposure Limit established by OSHA
19.	SARA	Superfund Amendments and Reauthorization Act
20.	TLV	Threshold Limit Value
21.	TSCA	Toxic Substances Control Act
22.	TOC	Total Organic Carbon
23.	UEL	Upper Explosive Limit in air

**"Save
Your
Breath
With**

NST[®]

MODERN SAFETY TECHNIQUES

11388 BREININGER RD.
P.O. BOX 87
HICKSVILLE, OH 43526

PHONE: (800) 542-6646
(419) 542-6645
FAX: (419) 542-6475

**MATERIAL
SAFETY
DATA
SHEET**

PRODUCT: 80033-B Catalyst
DATE: July 10, 1996

Page 1 of 4

EMERGENCY CONTACT:

C.E. Martin, President Telephone No.(Home)419-542-8266 (Office)800-542-6646 or
888-MOD-SAFE

The following information includes safety data required by OSHA. The recipient of this safety data is responsible for passing the safety information on so that it reaches the ultimate user who may come in contact with the material.

TRADE NAME: 987 LTC Catalyst

**CHEMICAL NAME
& FAMILY:** Alumina base catalyst with heavy metals.

SYNONYMS: Alumina base catalyst with heavy metals.

**CHEMICAL NOTATION
OR STRUCTURE:** Al₂O₃ + heavy metals.
Proprietary mixture.

INGREDIENTS: Alumina impregnated with heavy metals.
Proprietary mixture. Includes Nickel compounds.

CAS REGISTRY NO: Al₂O₃ - 1344-28-1
RTECS NO: Al₂O₃: BK 1200000

The information contained herein is based upon data considered true and accurate. However, MST, Inc. Makes no warranties, express or implied, as to the accuracy or adequacy of the information contained herein or the results to be obtained from the use thereof. This information is offered solely for the user's consideration, investigation and verification. Since the use and conditions of use of this information and the material described herein are not within the control of MST, Inc. MST, Inc. Assumes no responsibility for injury to the user or third persons. The material described herein is sold only pursuant to MST, Inc.'s Terms and Conditions of Sale, including those limiting warranties and remedies contained therein. It is the responsibility of the user to determine whether any use of this data and information is in accordance with applicable federal, state or local laws and regulations.

HEALTH INFORMATION

Page 2 of 4

PRECAUTIONS IN USE:

Because of the presence of a suspected carcinogen, avoid inhalation, ingestion or skin contact with the catalyst in either the product form or an altered form resulting from its use (dust, leachate, or waste). To avoid inhalation, use a properly fitted NIOSH-approved respirator fitted with a filter for highly toxic particulates. Ventilate the work area to keep dust levels below the PEL's shown on p. 3. Avoid skin contact by using rubber gloves, head coverings, goggles, and impervious clothing that is changed once a day. To prevent ingestion, do not allow eating, drinking or smoking in the work area. Hands and face must be washed before eating, drinking or smoking. Employees should shower after working with this material. SEE SPECIAL INFORMATION, p.4.

FIRST AID:

EYES: Immediately wash from eyes with large amounts of water, occasionally lifting upper & lower eye lids. If irritation occurs and persists, seek medical attention.

SKIN: Wash with soap & water. Remove contaminated clothing.

INGESTION: Drink 2 glasses of milk or water & induce vomiting by having patient touch the back of his throat with his finger. Never make an unconscious person vomit. Get medical attention immediately.

INHALATION: Remove to fresh air.

TOXICOLOGY

This product and its components are not listed on the IARC, NTP or OSHA Carcinogens Lists:

ANIMAL TOXICOLOGY

TESTS FOR DOT HAZARD CLASSIFICATION:

Not tested. Not classified as hazardous. Hazardous shipping label not required.

TESTS FOR FDA APPROVAL FOR USE IN FOODS:

Not a food-grade product. Must not be used in food or food contact.

HUMAN TOXICOLOGY:

Alumina is not known to cause any occupational disease. A mild desiccation of the skin may result from frequent contact. Nickel compounds are listed on the NTP and IARC lists as suspected carcinogens which have been known to cause cancer in laboratory animal tests. MST, Inc. knows of no medical conditions abnormally aggravated by exposure to this product. The primary route of entry is inhalation.

MATERIAL SAFETY DATA SHEET

Page 3 of 4

ENVIRONMENTAL DATA

Waste streams that contain this product must be treated to meet standards for toxic discharges.

TYPICAL CHEMICAL & PHYSICAL INFORMATION

APPEARANCE: Bluish green beads

pH IN 5% SLURRY: Approximately 5-9

ODOR: None

SPECIFIC GRAVITY: Approximately ~2.4

BULK DENSITY: 25-30 lbs/ft³

SOLUBILITY

IN WATER: Base-Insoluble. Heavy metals will leach.

APPROXIMATE

ANALYSIS:

		Wt. %	OSHA PEL mg/M ³	ACGIH mg/M ³
STC	Ni (as NiCl ₂)	0.15-0.19	1	1 (proposed =.05, eff. 1991)
	Al ₂ O ₃	30-40	n.1.	n.1.

n.1. - Not listed.

STC - SARA Toxic Chemical

STABILITY: Stable

REACTIVITY: Non-reactive

FIRE & EXPLOSION

DATA: Will not burn or explode

REGULATORY STATUS

Page 4 of 4

- OSHA-** See Approximate Analysis, p. 3.
- NIOSH-** Catalyst not evaluated.
- EPA-** Contains chemical (s) listed on the SARA 313 Toxic Chemical List. Toxic Chemical (s) shown in Approximate Analysis, p. 3 and by attachment if MSDS describes different product grades.
- ACGIH-** See Approximate Analysis, p. 3.
- USDA-** Not applicable. Not a food-grade product.
- FDA-** Not applicable. Not a food-grade product.
- DOT-** Not classified.

HANDLING INFORMATION

STORAGE AND

TRANSPORTATION:

Keep containers tightly sealed and dry.

DISPOSAL:

Dispose in a secure type landfill, suitable for toxic chemicals, according to state, local and federal regulations. See SPECIAL INFORMATION.

SPILLAGE AND CLEANUP:

Vacuum up. Return to container for re-use or disposal. Use protective measures specified in PRECAUTIONS IN USE section page 2.

CONTAINERS:

Steel drums, fiber drums or bins depending on the customer's requirements.

SPECIAL INFORMATION

Following contact with other chemicals or gases, the catalyst must be handled with special precautions. The combination of catalyst and retained material can be flammable and acutely toxic. Extra protection should be used besides that described in PRECAUTIONS IN USE. Avoid sources of ignition. Use NIOSH-approved organic vapor gas mask. Determine RCRA Hazardous Waste classification before disposal.

The information contained herein is based upon data considered true and accurate. However, MST, Inc. Makes no warranties, express or implied, as to the accuracy or adequacy of the information contained herein or the results to be obtained from the use thereof. This information is offered solely for the user's consideration, investigation and verification. Since the use and conditions of use of this information and the material described herein are not within the control of MST, Inc. MST, Inc. Assumes no responsibility for injury to the user or third persons. The material described herein is sold only pursuant to MST, Inc.'s Terms and Conditions of Sale, including those limiting warranties and remedies contained therein. It is the responsibility of the user to determine whether any use of this data and information is in accordance with applicable federal, state or local laws and regulations.